




# BYD ATTO 2 DM-i

(5-door model, 2026-)

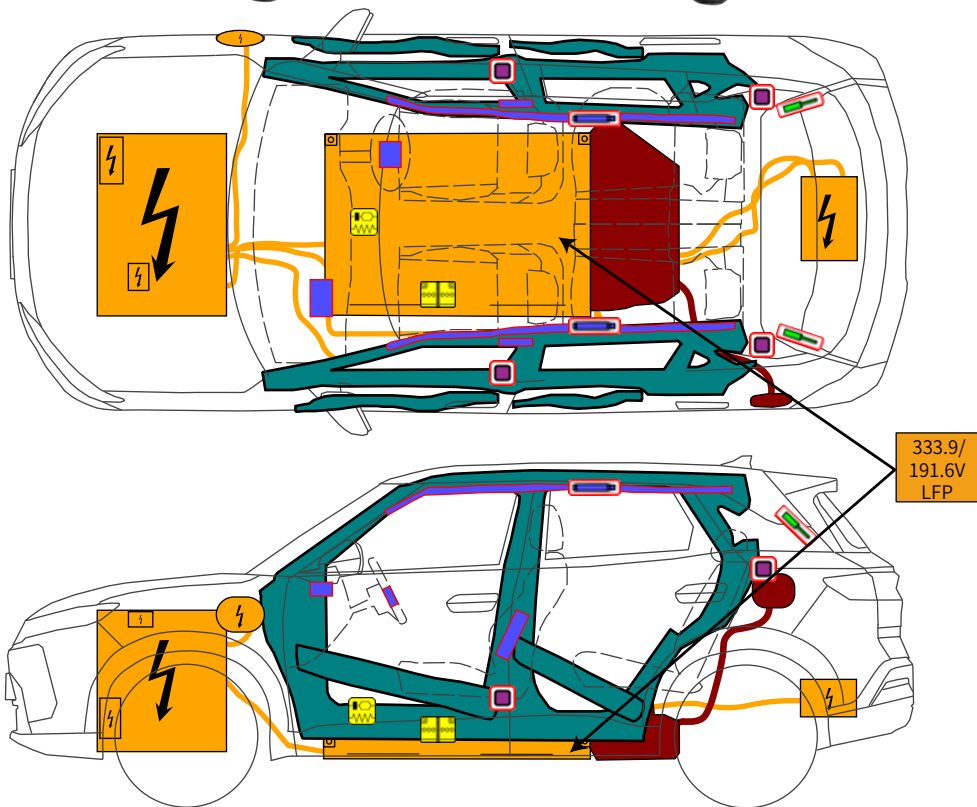

|  |                                |  |                     |  |                            |  |                                    |
|--|--------------------------------|--|---------------------|--|----------------------------|--|------------------------------------|
|  | Airbag                         |  | Battery low voltage |  | Battery pack, high-voltage |  | Fuel tank content gasoline/ethanol |
|  | Gas strut/<br>Preloaded spring |  | High strength zone  |  | High voltage component     |  | High voltage power cable           |
|  | Seat belt pretensioner         |  | SRS control unit    |  | Stored gas inflator        |  |                                    |



## 1. Identification / recognition



The electric motor is silent. The OK indicator light on the instrument cluster indicates that the current electric drive system is operational. Wear appropriate personal protective equipment.



## 2. Immobilisation / stabilisation / lifting

Immobilise the vehicle



Shift into Park



Turn off the ignition



Chock wheels

Stabilisation-lifting points



■ Stabilisation-lifting points  
■ High-voltage battery

## 3. Disable direct hazards / safety regulations

Main disabling method



Access to 12V battery



Do not touch, cut, or open high-voltage components and the high-voltage battery! Wear appropriate protective equipment!

In the event of an accident in which the airbags are deployed, the high-voltage system will be automatically deactivated. The high-voltage system is de-energised approximately 60 seconds after deactivation.



# BYD ATTO 2 DM-i

(5-door model, 2026-)



## 4. Access to the occupants

High-strength zone



Steering column adjustment



Glass types



- 1 Laminated glass
- 2 Tempered glass

Seat adjustment  
Configuration 1



Seat adjustment  
Configuration 2



## 5. Stored energy / liquids / gases / solids

|  |  |                     |
|--|--|---------------------|
|  |  | 12.8V               |
|  |  | 333.9/191.6V        |
|  |  | R-1234yf<br>850±10g |



When there is coolant leakage, the battery pack may become unstable and there is risk of thermal runaway. The battery pack temperature must be checked with a thermal imaging camera.



## 6. In case of fire



Extinguish the fire using large amounts of water.



BATTERY RE-IGNITION!



## 7. In case of submersion


After removing the vehicle from the water, shut off the high-voltage system (see Chapter 3) and drain water out of the vehicle. Appropriate personal protective equipment must be worn during this procedure.

## 8. Towing / transportation / storage

Front hook location



Rear hook location (if equipped)

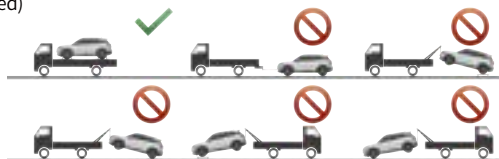

Store at a safe distance from other vehicles!



BATTERY RE-IGNITION!

## 9. Additional important information

None.

## 10. Explanation of pictograms used

|                                                                                    |                                  |                                                                                     |                             |
|------------------------------------------------------------------------------------|----------------------------------|-------------------------------------------------------------------------------------|-----------------------------|
|   | Acute toxicity                   |   | Air-conditioning component  |
|  | Hazardous to the human health    |  | Corrosives                  |
|  | Explosive                        |  | Flammable                   |
|  | General warning sign             |  | Warning; low temperature    |
|  | Remove smart key                 |  | Warning, Electricity        |
|  | Use water to extinguish the fire |  | Use thermal Infrared camera |