

(LHD vehicle shown. The steering wheel and airbags are mirrored on RHD vehicles.)

	Airbag		Battery low voltage		Battery pack, high-voltage		Cable cut
	Gas strut/ Preloaded spring		High strength zone		High voltage component		High voltage power cable
	Seat belt pretensioner		SRS control unit		Stored gas inflator		



1. Identification / recognition




The electric motor is silent. The OK indicator light on the instrument cluster indicates that the current electric drive system is operational. Wear appropriate personal protective equipment.



2. Immobilisation / stabilisation / lifting

Immobilise the vehicle

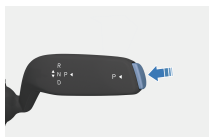

Shift into "P"

 


Turn off the ignition



Chock wheels


Stabilisation-lifting points




■ Stabilisation-lifting points
■ High-voltage battery

3. Disable direct hazards / safety regulations

Main disabling method

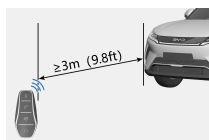

Alternative disabling method

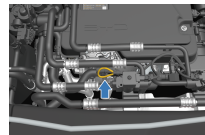

Access to 12V battery






Do not touch, cut, or open high-voltage components and the high-voltage battery! Wear appropriate protective equipment!


In the event of an accident in which the airbags are deployed, the high-voltage system will be automatically deactivated. The high-voltage system is de-energised approximately 60 seconds after deactivation.

4. Access to the occupants


High-strength zone

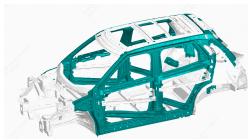

Steering column adjustment

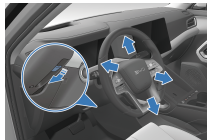


Glass types

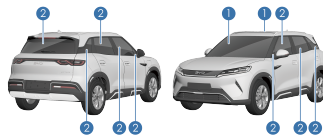

1 Laminated glass

2 Tempered glass

Seat adjustment

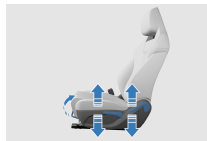

5. Stored energy / liquids / gases / solids

		12.8V
		300.8V
		R-1234yf: 1050g/950g±10g R-134a: 1150g/950g±10g



When there is coolant leakage, the battery pack may become unstable and there is risk of thermal runaway. The battery pack temperature must be checked with a thermal imaging camera.



6. In case of fire



Extinguish the fire using large amounts of water.



BATTERY RE-IGNITION!




7. In case of submersion

After removing the vehicle from the water, shut off the high-voltage system (see Chapter 3) and drain water out of the vehicle. Appropriate personal protective equipment must be worn during this procedure.

8. Towing / transportation / storage

Front hook location

Rear hook location (if equipped)

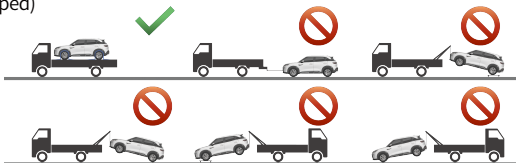

Store at a safe distance from other vehicles!



BATTERY RE-IGNITION!

9. Additional important information

None.

10. Explanation of pictograms used

	Acute toxicity		Air-conditioning component
	Bonnet		Corrosives
	Explosive		Flammable
	General warning sign		Hazardous to the human health
	Remove smart key		Use thermal Infrared camera
	Use water to extinguish the fire		Warning, Electricity
	Warning; low temperature		