


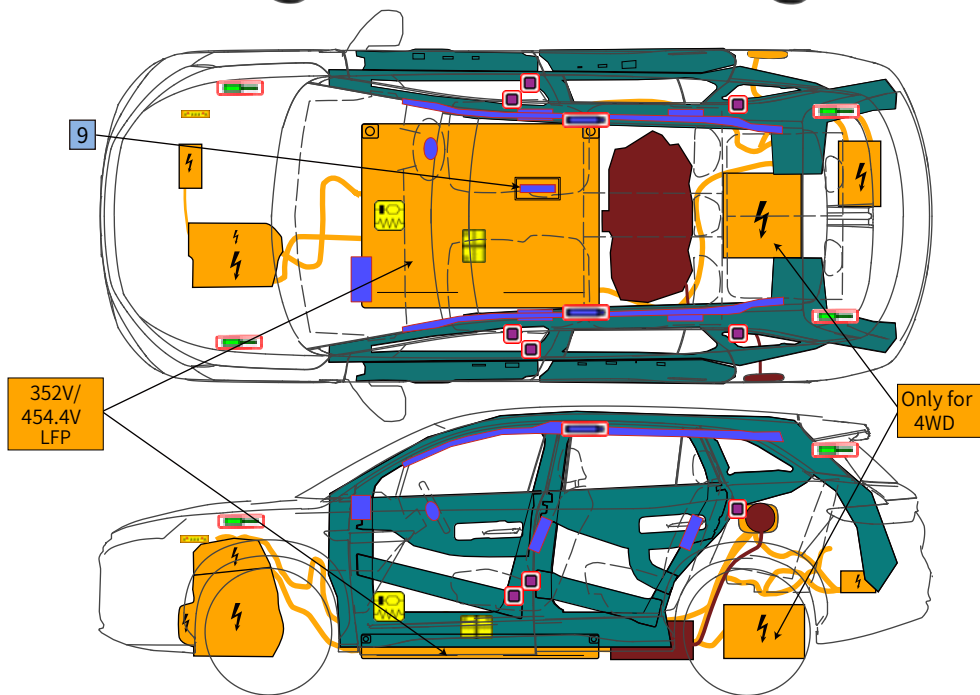

	Airbag		Battery low voltage		Battery pack, high-voltage		Cable Cut
	Fuel tank content gasoline/ethanol		Gas strut/Preloaded spring		High strength zone		High voltage component
	High voltage power cable		Seat belt pretensioner		SRS control unit		Stored gas inflator
	Zone requiring special attention						



1. Identification / recognition



Lack of engine noise does not mean vehicle is off: silent movement or instant restart capability exists until vehicle is fully shut down. Wear appropriate personal protective equipment.



The wheel rim configurations differ between the DM-P and DM-i models. Unless otherwise specified, the illustrations in this document are based on the DM-i model.

2. Immobilisation / stabilisation / lifting

Immobilise the vehicle



Shift into Park



Turn off the ignition



Stabilisation-lifting points
4WD 2WD

■ Stabilisation-lifting points
■ Stabilisation points for vehicle on side
■ High-voltage battery

3. Disable direct hazards / safety regulations

Main disabling method



The high-voltage system is automatically shut down upon detection of airbag deployment signal. When both indicators are displayed on the instrument cluster and the airbags have been deployed, the high-voltage system is confirmed to be disconnected and the alternative disabling method is not required.

Alternative disabling method



CAUTION



Access to low voltage battery



CAUTION



Do not touch, cut, or open high-voltage components and the high-voltage battery! Wear appropriate protective equipment!

In the event of an accident in which the airbags are deployed, the high-voltage system will be automatically deactivated. The high-voltage system is de-energised approximately 60 seconds after deactivation.



4. Access to the occupants

High strength zone



 
Seat adjustment



Steering column adjustment



Glass types



- ① Laminated glass
- ② Tempered glass

Inside door release



Outside door release



The front and rear doors are opened in the same way.

5. Stored energy / liquids / gases / solids

		12.8 V
		352 V/ 454.4 V
		R1234yf 1500±20 g
		60 L



When there is coolant leakage, the battery pack may become unstable and there is risk of thermal runaway. The battery pack temperature must be checked with a thermal imaging camera.



6. In case of fire



Extinguish the fire using large amounts of water.



BATTERY RE-IGNITION!



Gas strut / Preloaded spring (see Page 1) may cause projectile hazards from the bonnet and boot lid.



If all two indicators illuminate simultaneously on the instrument cluster, a high-voltage battery thermal runaway has occurred. Evacuate immediately.



7. In case of submersion


After removing the vehicle from the water, shut off the high-voltage system (see Chapter 3) and drain water out of the vehicle. Appropriate personal protective equipment must be worn during this procedure.

8. Towing / transportation / storage

Front hook location



Rear hook location

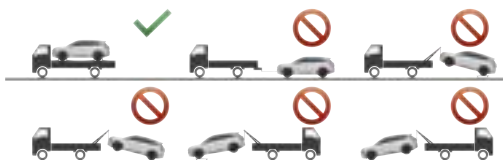

Store at a safe distance from other vehicles!



BATTERY RE-IGNITION!

9. Important additional information



Driver's seat has a far side airbag in addition to the side airbag. Location of far side airbag is shown in the mark **9** on page 1.

Contact Us

Call 1800 293 288 for 24/7 Roadside Assistance or Customer Service/Center (Monday-Friday, 09:30 AM-17:30 PM, excluding public holidays).

For emergency respond guide (ERG), refer to <https://bydautomotive.com.au/first-responder-information>.

10. Explanation of pictograms used

	Acute toxicity		Air-conditioning component		Airbag fault warning light
	Bonnet		Corrosives		Explosive
	Flammable		General warning sign		Hazardous to the human health
	High-voltage battery fault warning light		Powertrain fault warning light		Seat adjustment, longitudinal
	Thermal runaway warning light		Use thermal infrared camera		Use water to extinguish the fire
	Warning, Electricity		Warning, Low temperature		